








 












 
 




 




 






 










 




 





 


 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Exit		Exit
	Last		Pre Ch
	Tv/R		TV/R
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Sub-T.		Subt
	Info		Info
	Text		Text
	Audio		Dual
	USB		AV
	Timer		Shift + AV
	Favor		Shift + Pre Ch
	Red/Left		Red
	Green/Right		Green





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Yellow/>>>	 Yellow		
 Blue/>>>	 Blue		
 Rec	 Rec		
 Stop	 Stop		
 Play	 Play		
 Pause	 Pause		

