



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	6		6
	5		5
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Repeat		Text
	Shuffle		Media
	Play		Play

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Stop		Stop
	>>		>>
	<<		<<
	>>		>>
	<<		<<
	Option		Options
	Display		Info
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Folder Up		Ch +
	Folder Down		Ch -
	Clear		Exit
	Sleep		Sleep





Originalfernbedienung Ersatzfernbedienung

<b>DIMMER</b>	Dimmer	<b>SEARCH TV/R</b>	TV/R
<b>TP</b>	TP	<b>FAV PRE-CH</b>	Pre Ch
<b>MONO</b>	Mono	<b>SOUND DUAL</b>	Dual
<b>PRESET</b> (up)	Preset Up	<b>SHIFT</b> + <b>UP</b>	Shift + Up
<b>PRESET</b> (down)	Preset Down	<b>SHIFT</b> + <b>DOWN</b>	Shift + Down
<b>MEMORY</b>	Memory	<b>REC MODE</b>	Rec
<b>TUNING</b> (up)	Tuning Up	<b>B</b>	Green
<b>TUNING</b> (down)	Tuning Down	<b>A</b>	Red
<b>CD</b>	CD	<b>SHIFT</b> + <b>1</b>	Shift + 1
<b>USB</b>	USB	<b>SHIFT</b> + <b>2</b>	Shift + 2
<b>AUX</b>	AUX	<b>SHIFT</b> + <b>3</b>	Shift + 3
<b>TUNER</b>	Tuner	<b>SHIFT</b> + <b>4</b>	Shift + 4
<b>iPod</b>	iPod	<b>SHIFT</b> + <b>5</b>	Shift + 5
<b>Folder Up iPod</b>	Folder Up iPod	<b>SHIFT</b> + <b>+ CH</b>	Shift + Ch +
<b>Folder Down iPod</b>	Folder Down iPod	<b>SHIFT</b> + <b>- CH</b>	Shift + Ch -
<b>REPEAT</b>	Repeat iPod	<b>HOME SMART</b>	Smart
<b>SHUFFLE</b>	Shuffle iPod	<b>SHIFT</b> + <b>APP MEDIA</b>	Shift + Media

Originalfernbedienung Ersatzfernbedienung

<b>ENTER</b>	Enter iPod	<b>SHIFT</b> + <b>OK</b>	Shift + Ok
<b>&gt;&gt;I</b>	>>I iPod	<b>SHIFT</b> + <b>RIGHT</b>	Shift + Right
<b>I&lt;&lt;</b>	I<< iPod	<b>SHIFT</b> + <b>LEFT</b>	Shift + Left
<b>MENU</b>	Menu iPod	<b>TOP MENU MENU</b>	Menu
<b>Play/Pause iPod</b>	Play/Pause iPod	<b>SHIFT</b> + <b>PLAY MODE</b>	Shift + Play
<b>Open/Close</b>	Open/Close	<b>ZOOM</b>	Eject
<b>CLOCK</b>	Clock	<b>E-MANUAL D.MENU</b>	D. Menu
<b>TIMER</b>	Timer	<b>TIMER AV</b>	AV

