 
 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|-------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 6 |  | 6 |
|  | 5 |  | 5 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | Repeat |  | Text |
|  | Shuffle |  | Media |
|  | Play |  | Play |

Originalfernbedienung Ersatzfernbedienung



 
 

| | | | |
|---|-------------|---|---------|
|  | Pause |  | Pause |
|  | Stop |  | Stop |
|  | >> |  | >> |
|  | << |  | << |
|  | >> |  | >> |
|  | << |  | << |
|  | Option |  | Options |
|  | Display |  | Info |
|  | Enter |  | Ok |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Folder Up |  | Ch + |
|  | Folder Down |  | Ch - |
|  | Clear |  | Exit |
|  | Sleep |  | Sleep |




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|--|---------------|
| DIMMER | Dimmer | SEARCH TV/R | TV/R |
| TP | TP | FAV PRE-CH | Pre Ch |
| MONO | Mono | SOUND DUAL | Dual |
| PRESET | Preset Up | SHIFT +  | Shift + Up |
| PRESET | Preset Down | SHIFT +  | Shift + Down |
| MEMORY | Memory | REC MODE | Rec |
| TUNING | Tuning Up | B | Green |
| TUNING | Tuning Down | A | Red |
| CD | CD | SHIFT + 1 | Shift + 1 |
| USB | USB | SHIFT + 2 | Shift + 2 |
| AUX | AUX | SHIFT + 3 | Shift + 3 |
| TUNER | Tuner | SHIFT + 4 | Shift + 4 |
| iPod | iPod | SHIFT + 5 | Shift + 5 |
|  | Folder Up iPod | SHIFT + + CH | Shift + Ch + |
|  | Folder Down iPod | SHIFT + - CH | Shift + Ch - |
| REPEAT | Repeat iPod | HOME SMART | Smart |
| SHUFFLE | Shuffle iPod | SHIFT + APP MEDIA | Shift + Media |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|--|---------------|
| ENTER | Enter iPod | SHIFT + OK | Shift + Ok |
|  | >>I iPod | SHIFT +  | Shift + Right |
|  | I<< iPod | SHIFT +  | Shift + Left |
| MENU | Menu iPod | TOP MENU MENU | Menu |
|  | Play/Pause iPod | SHIFT + PLAY MODE | Shift + Play |
|  | Open/Close | ZOOM | Eject |
| CLOCK | Clock | E-MANUAL D.MENU | D. Menu |
| TIMER | Timer | TIMER AV | AV |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

