











 
 
 
 
 









 




 

 

 





 

 


 
 


 

 

 
 



 
 
 





Originalfernbedienung Ersatzfernbedienung



 
 
 
 
 

 

 
 

 

 

 




 
 

 
 

 
 



 






	Power		Power
	Open/Close VCR		Pre Ch
	Open/Close		Guide
	DVD/VCR		Media
	Input Select		Shift + AV
	Display		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	P+		Ch +
	P-		Ch -
	TRK+		Vol +
	TRK-		Vol -
	Setup		Options
	Cancel		Exit
	Return		Back
	Title Menu/Top		Menu
	DVD Menu		D. Menu
	One Touch		Green
	Repeat A-B		Text
	Play Mode/Repeat		Shift + Play
	Zoom		Eject





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 CM Skip	 Yellow	 Rec/OTR	 Rec
 Audio/Audio	 Dual	 Pause II/ <	 Pause
 Subtitle/ATR	 Subt	 I>	 List
 Progressive	 Smart		
 Clock/Counter	 3D		
 Angle/00:00:00	 Red		
 LZero	 Format		
 Timer Rec	 AV		
 Rec Mode / Speed	 Shift + Rec		
 Dubbing	 Blue		
 TV/VCR	 TV/R		
 <<	 <<		
 Play	 Play		
 >>	 >>		
 I<< Skip Index -	 I<<		
 Stop	 Stop		
 >>I Skip	 >>I		

Index+

