

 
 







 
 



 
 
 

 
 
 

 
 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Exit		Exit
	Up/CH+		Up
	Down/CH-		Down
	Right		Right


 






Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	SAT		Smart
	FAV		Pre Ch
	EPG		Guide
	[ ]/♪		Dual
	Tv/AV		AV
	Play		Play
	Pause		Pause
	Back		Back
	UHF		TV/R
	i		Info
	PAL/NTSC		Format





Originalfernbedienung   Ersatzfernbedienung

 Red/Audio	 A Red
 Green/Position	 B Green
 Yellow/[...]	 C Yellow
 Blue/Audio R/L	 D Blue

Originalfernbedienung   Ersatzfernbedienung