



 



 

 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	OSD		Display / Media
	1		1
	2		2
	3		3
	V-Mode		Picture / Format
	4		4
	5		5
	6		6
	P/N		Text / Goto
	7		7
	8		8
	9		9
	Program		TV/Radio /
	0		0
	10+		Guide / EPG / -/-

Originalfernbedienung Ersatzfernbedienung

	Search		Red / Netflix / Search
	Setup		Setup / OPT /
	Menu		Menu / Home
	Title		Sound / Title
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	PBC		Smart / List
	USB/Card		AV / Input / RDS
	Zoom		Zoom / Size
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze





Originalfernbedienung Ersatzfernbedienung

	I<<		I<< / Preset-
	>>		>> / Tune+
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Audio		Audio / Lang I/II
	Slow-B		CH- / Page-
	Slow-F		CH+ / Page+
	Return		Back / Return
	L/R		D.Menu / Top
	A-B		Yellow / YouTube / Repeat
	Step		Shift + Pause / Step /
	Vol+		Vol+
	Mute		Mute / Dimmer
	Repeat		Green / APP / Repeat
	Shuffle		Blue / Prime Video / Random
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

