






 











 

 



 
 
 
 
 
 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Back		Back
	Menu		Menu
	Digital		Smart
	Analog		Media
	Theatre		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Return		Shift + Back
	Tools		Options
	Source		AV
	[i+]		Info
	[I]		Guide
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[+]		3D
	[> <]		Format
	A/B		TV/R
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Prog+		Ch +
	Prog-		Ch -

