



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input TV		TV/Radio /
	Input Av		AV / Input / RDS
	Guide		Guide / EPG / -/--
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[+]/Aspect		Picture / Format

Originalfernbedienung Ersatzfernbedienung

	Link Vieta		Smart / List
	Option		Setup / OPT /
	Direct Tv Rec		Shift + Rec / Rec Mode
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	i		Info / Angle
	0/VCR		0
	0/VCR		Shift + 4 / Shift + 4
	Mute		Mute / Dimmer
	CH+		CH+ / Page+



