





 


































 



 


 





















 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	A1	 + 	Shift + Smart / List
	V-Format		Picture / Format
	Timer		Sleep / Timer
	Mute		Mute / Dimmer
	Tms		AV / Input / RDS
	B2	 + 	Shift + Display / Media
	F1	 + 	Shift + 1
	Tv/Sat		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	Tv/Radio		TV/Radio /
	0/Zoom		0
	0/Zoom		Zoom / Size
	Recall		Back / Return
	Find	 + 	Shift + Red / Netflix /
	Vol-		Vol-
	Page-		CH- / Page-
	SAT		Display / Media
	Rec		Rec / Rec Mode
	Vol+		Vol+
	Page+		CH+ / Page+
	FAV		Fav / Marker / PC
	Menu		Menu / Home
	Up		Up
	Info		Info / Angle
	Left		Left


 
 




Originalfernbedienung Ersatzfernbedienung

	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	EPG		Guide / EPG / -/--
	Folder		Eject / Surround
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<</Page-		<< / Tune-
	<</Page-		Shift + CH- /
	>>/Page+		>> / Tune+
	>>/Page+		Shift + CH+ /
	<I		Shift + I<< / Preset-
	I>		Shift + >>I / Preset+

Originalfernbedienung Ersatzfernbedienung

	Play Mode		Sound / Title
	USB		Shift + 8
	Red		Red / Netflix / Search
	Audio		Audio / Lang I/II
	Green		Green / APP / Repeat
	Option		Setup / OPT /
	TXT		Text / Goto
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

