 
 













 

 

 
 








 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Stop		Stop
	Rec		Rec
	Tv/TXT		Text
	Cancel		Back
	Reveal		D. Menu
	Hold		Options
	Size		Eject
	Subpage		Shift + Subt
	Index		Info
	Red		Red

Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Source		AV
	Menu		Menu
	DVB		Smart
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	1		1





Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	+	Shift + Guide
	Recall		Pre Ch
	Picture	+	Shift + Format
	Sound	+	Shift + Dual
	Nicam/A2		Media
	Mute		Mute
	Sleep		Sleep
	Tv/Radio		TV/R

Originalfernbedienung Ersatzfernbedienung

	FAV	+	Shift + Pre Ch
	FAV+	+	Shift + Ch +
	FAV-	+	Shift + Ch -
	Subtitle		Subt
	Pic Format		Format
	Language		Dual
	EPG		Guide
	Text		List
	Display		3D

