

 





 

 

 

 

 

 













 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	SD Card		Display / Media
	Input TV		TV/Radio /
	Input AV		AV / Input / RDS
	Menu		Menu / Home
	[+]/Aspect		Picture / Format
	N		Sound / Title
	Direct Rec TV		Shift + Rec / Rec Mode
	i		Info / Angle
	Exit		Exit / Cancel / Clear
	Viera Tools		D.Menu / Top
	Viera Link		Smart / List
	Up		Up
	Guide		Guide / EPG / -/--
	Left		Left
	OK		OK
	Right		Right

**Originalfernbedienung    Ersatzfernbedienung**

	Option		Setup / OPT /
	Down		Down
	Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	[≡◆]/STTL		Subtitle / EQ
	[≡i]/Index		Eject / Surround
	[≡+]/Hold		Shift + Stop /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6



