



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV	 + 	Shift + Pre Ch
	Recall		Pre Ch
	Game		Media
	Auto		Smart
	Info		Info

**Originalfernbedienung    Ersatzfernbedienung**

	Menu		Menu
	EPG		Guide
	Exit		Exit
	Up / CH + / I<<<		Up
	Down / CH - / >>>I		Down
	Right / Vol +		Right
	Left / Vol -		Left
	OK		Ok
	Up / CH + / I<<<		I<<<
	Down / CH - / >>>I		>>>I
	Up / CH + / I<<<		Ch +
	Down / CH - / >>>I		Ch -
	Left / Vol -		Vol -
	Right / Vol +		Vol +
	Red / Zoom		Red
	Green / Lan/Audio		Green
	Yellow /		Yellow



Play/Pause

