 











 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	Recall		Back
	Audio		Dual
	Subtitle		Subt
	Info		Info





Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	EPG		Guide
	Exit		Exit
	Up		Up
	CH+		Ch +
	Down		Down
	CH-		Ch -
	Right		Right
	Vol+		Vol +
	Left		Left
	Vol-		Vol -
	OK		Ok
	Text		Text
	Red		Red
	Green		Green
	Pause		Pause
	Yellow		Yellow





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
 Tv/Radio	 TV/R
 Blue	 Blue

Originalfernbedienung Ersatzfernbedienung

