



 
 
 
 
 
 
 

 

 

 

 

 

 
 
 
 
 
 
 

 
 






Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Auto		Smart
	Tv/Radio		TV/R
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Back		Back
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Nicam/A2		Options
	Aspect		3D
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu		Menu
	Exit		Exit
	Source		AV
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Sleep		Sleep



 



 

 
 
 
 
 
 
 





Originalfernbedienung Ersatzfernbedienung

	Fav		Pre Ch
	Fav-		Shift + Ch -
	Fav+		Shift + Ch +
	Hold		Shift + AV
	EPG		Guide
	Text		Text
	Lang		Dual
	Subtitle		Subt
	Index		List
	Reveal		Eject
	Subpage		D. Menu
	Media		Media
	Size		Format
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

