 



 
 
 
 

 
 

 

 
 
 

 
 



 

 

 

 

 
 
 


 
 



 

 
 
 



 

 

 
 
 
 
 

 
 
 

 

 







**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	E-Manual	 + 	Shift + D. Menu
	[ ]/Ratio		Dual
	Input		AV
	Tv/Rad		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Q.View		Format

**Originalfernbedienung Ersatzfernbedienung**

	3D		3D
	Vol+		Vol +
	Vol-		Vol -
	FAV		Pre Ch
	Mute		Mute
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Home		Smart
	Back		Back
	My		D. Menu
	Guide		Guide
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left



