



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Freeze		Pause
	Sleep		Sleep
	PIP Source		Eject
	Main		D. Menu
	Swap		Pre Ch
	Position		Options
	Size		Format
	PIP		Smart
	(=)(-)		Text
	(=)(o)		TV/R
	(=)(i)		Guide
	(=)(♦)		Media
	(=)(▲)		>>I
	(=)(▼)		I<<
	(+)		Exit

Originalfernbedienung Ersatzfernbedienung

	(≡x)		List
	(≡?)		Subt
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Picture		Shift + Format
	Aspect		3D
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Audio		Dual
	Vol+		Vol +
	Source		AV
	Vol-		Vol -
	Menu		Menu



