










 



 





 



 



 





 

 




 



 

 





 




 

 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Shift + Power
	Mute		MUTE
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-- / 10+		-/-- / EPG
	Recall		BACK
	Source		SRC
	-[/]- / P.STD		V-FOR

Originalfernbedienung Ersatzfernbedienung

	-[]- / S.STD		Shift + Audio
	Menu / ATV		MENU
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	OK		OK
	Vol +		VOL +
	Vol -		VOL -
	Program +		CH +
	Program -		CH -
	Info		INFO
	Setup / DVD /		VOD
	I/II		Audio
	[/ =] / Text		TEXT
	Open / Close		Shift + P/C / FAV
	Play		Play



