


 


 


 




 




 

 

 

 

 

 

 






Originalfernbedienung		Ersatzfernbedienung	
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual
	Recall		Back
	Tv Menu		Menu
	Source		AV
	ChList		List

Originalfernbedienung	Ersatzfernbedienung
	
Exit	Exit
	
Up	Up
	
Down	Down
	
Right	Right
	
Left	Left
	
Ok	Ok
	
Vol+	Vol +
	
Vol-	Vol -
	
Sound	Shift + Dual
	
Pic	Shift + Format
	
Ch+	Ch +
	
Ch-	Ch -
	
Sleep	Sleep
	
Aspect	Format
	
Freeze	Eject
	
Tv/Radio	TV/R
	
Text	Text





	+		Shift + Info
	+		Shift + AV

