

 
 


 

 
 








 
 





Originalfernbedienung Ersatzfernbedienung





 
 
 
	Power		Power
	Mute		Mute
	TV / R		TV/R
	Mode		Smart
	EPG		Guide
	Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Favor		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Last		Back
	Menu		Menu
	Exit		Exit
	Up		Up
	Ch +		Ch +
	Down		Down
	Ch -		Ch -
	Right		Right
	Vol +		Vol +
	Left		Left
	Vol -		Vol -
	OK		Ok
	Info		Info
	Sub-T		Subt
	PVR		AV
	Audio		Dual
	I>		>>I




**Originalfernbedienung Ersatzfernbedienung**

	Red		Red
	<<		<<
	Green		Green
	>>		>>
	Yellow		Yellow
	Play		Play
	Pause		Pause
	Blue		Blue
	Stop		Stop
	Rec		Rec

**Originalfernbedienung Ersatzfernbedienung**