



 


 

 


 
 

 





 
 
 

















 






 
 


 

 






 
 

 

 
 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Source		AV
	HDMI		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -

**Originalfernbedienung    Ersatzfernbedienung**

	PR+		Ch +
	PR-		Ch -
	Mute		Mute
	CH.List		List
	Media.P		Media
	Menu		Menu
	Guide		Guide
	Tools		Options
	Info		Info
	Return		Back
	Exit		Exit
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Red/A		Red





Originalfernbedienung    Ersatzfernbedienung

	Green/B		Green
	Yellow/C		Yellow
	Blue/D		Blue
	Internet/@Tv		Smart
	S.Mode		Shift + Dual
	Alarm		Sleep
	Dual/I-II		Dual
	P.Size		Format
	Subt.		Subt
	<<		<<
	>>		>>
	Pause		Pause
	Rec		Rec
	Play		Play
	Stop		Stop

Originalfernbedienung    Ersatzfernbedienung