 



 
 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV / Input / RDS
	? / Audio		Audio / Lang I/II
	PIP / Repeat		Fav / Marker / PC
	PIP / Repeat		Shift + Green / APP /
	[<>] / [...]		Shift + Picture / Format
	[<>] / [...]		Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung

	Mute / [Q]		Mute / Dimmer
	i		Info / Angle
	Z / Back		Back / Return
	CH+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	CH-		CH- / Page-
	TXT/Menu		Menu / Home
	TXT/Menu		Text / Goto
	TV-G/Top Menu		D.Menu / Top
	TV-G/Top Menu		Guide / EPG / -/-
	Red / Eye		Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung




	Rec		Rec / Rec Mode
	Green / Timer		Sleep / Timer
	Play		Play / Slow
	Green / Timer		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Pause		Pause / Step / Freeze
	Blue / Audio		Shift + Audio / Lang I/II
	Stop		Stop / Hold
	Blue / Audio		Blue / Prime Video / Random
	Scan		Smart / List
	I<		I<< / Preset-
	PAT		Eject / Surround
	>I		>>I / Preset+
	S		Sound / Title
	<<		<< / Tune-
	P		Picture / Format
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung





 

 









 

 

 

 







 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV / Input / RDS
	i		Info / Angle
	Exit		Exit / Cancel / Clear
	Up		Up
	CH+		CH+ / Page+
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	CH-		CH- / Page-
	Menu		Menu / Home
	Top Menu		D.Menu / Top
	Red		Red / Netflix / Search
	Rec		Rec / Rec Mode
	Green		Green / APP / Repeat
	Play		Play / Slow
	Yellow		Yellow / YouTube / Repeat
	Pause		Pause / Step / Freeze
	Blue		Blue / Prime Video / Random
	Stop		Stop / Hold
	I<		I<< / Preset-



