



 

 

 
 

 
 
 
 

 





 
 



 

 

 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-------|
|  | Power |  | Power |
|  | Input |  | AV |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | TV |  | TV/R |
|  | RGB |  | List |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | CH+ |  | Ch + |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|---------------|
|  | CH- |  | Ch - |
|  | Mute |  | Mute |
|  | In Stop |  | D. Menu |
|  | OK |  | Ok |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right/time Shift |  | Right |
|  | Left/Time Shift |  | Left |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | In Start |  | Eject |
|  | ADJ |  | Options |
|  | XStudio |  | Dual |
|  | Text |  | Text |
|  | Check-P |  | Shift + Left |
|  | Check-S |  | Shift + Right |
|  | PSM |  | Pre Ch |

 
 
 
 
 

 



 












Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------------|---|--------------|
|  | PIP |  | 3D |
|  | CAP |  | Info |
|  | MPX |  | Sleep |
|  | SSM |  | Subt |
|  | ARC |  | Format |
|  | Red/Info |  | Red |
|  | Green/Still |  | Green |
|  | Yellow/HDMI-HO |  | Yellow |
|  | Blue/USB-HOT |  | Blue |
|  | Eye |  | Back |
|  | B-Tooth |  | Smart |
|  | Simplink / PIP PR- |  | Shift + Ch - |
|  | PIP PR + |  | Shift + Ch + |
|  | Tilt/PIP Input |  | Shift + AV |
|  | Play |  | Play |
|  | Pause/Swap |  | Pause |
|  | >>I |  | >>I |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-----------|
|  | I<< |  | I<< |
|  | P-Only |  | Guide |
|  | AV1 |  | Shift + 1 |
|  | AV2 |  | Shift + 2 |
|  | AV3 |  | Shift + 3 |
|  | COMP1 |  | Shift + 4 |
|  | COMP2 |  | Shift + 5 |
|  | HDMI1 |  | Shift + 6 |
|  | HDMI2 |  | Shift + 7 |
|  | HDMI3 |  | Shift + 8 |
|  | HDMI4/DVI |  | Shift + 9 |

