



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Input Select		AV
	Display		Info






 
 












 


 

 



 

 
 
 
 

 

 
Originalfernbedienung Ersatzfernbedienung

	Time/Text		Text
	Timer		Shift + AV
	Tv/Video		TV/R
	[...]		Subt
	O)))		Dual
	-/--/Clear		Guide
	System Menu		Menu
	Title List		List
	Timer List		Format
	Menu		D. Menu
	Top Menu		Shift + Menu
	Eject		Eject
	Return		Back
	Tools		Options
	Enter		Ok
	Up		Up
	Down		Down





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	Play		Play
	Stop		Stop
	Pause		Pause
	>>/I>		>>
	<</<I		<<
	>>I		>>I
	I<<		I<<
	→		SHIFT +  Shift + Right
	←		SHIFT +  Shift + Left
	Visual Search		Blue
	Set		Pre Ch
	Sur		Sleep
	Rec		Rec
	Rec Pause		SHIFT +  Shift + Pause
	Rec Stop		SHIFT +  Shift + Stop

Originalfernbedienung Ersatzfernbedienung

	Rec Mode		Shift + Rec
	Synchro Rec		3D
	Chapter Mark		Red
	Mark Erase		Shift + Eject
	Camera		Exit
	Progressive		Green
	[+]		Yellow
	Power Tv		Shift + Power
	HDD		Smart
	DVD		Media
	1 Tv		Shift + 1
	2 Tv		Shift + 2
	3 Tv		Shift + 3
	4 Tv		Shift + 4
	5 Tv		Shift + 5
	6 Tv		Shift + 6
	7 Tv		Shift + 7





Originalfernbedienung Ersatzfernbedienung

	8 Tv	+	Shift + 8
	9 Tv	+	Shift + 9
	0 Tv	+	Shift + 0
	-/--/Clear Tv	+	Shift + Guide
	Prog + Tv	+	Shift + Ch +
	Prog - Tv	+	Shift + Ch -
	Tv/Video Tv	+	Shift + TV/R

Originalfernbedienung Ersatzfernbedienung

