



Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Source Power		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Channel+		Ch +
	Channel-		Ch -

Originalfernbedienung Ersatzfernbedienung




Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Play		Play
	Stop		Stop
	Still/Pause		Pause
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Push/Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu/Guide		Guide
	Top Menu		Menu
	Return		Back
	Tool		Options
	>>I/Channel+		>>I

Originalfernbedienung Ersatzfernbedienung

	I<</Channel-		I<<
	>>/Tuning+		>>
	<</Tuning-		<<
	DVS/Stereo		Dual
	Display		Info
	Subwoofer Level+		Ch +
	Subwoofer Level-		Ch -
	Source Power		Shift + Power
	DVD/CD		Red
	FM/AM		Green
	AUX		Yellow
	iPod		Blue
	Home		Smart
	Net/USB		Media
	1		1
	2		2
	3		3







 
 

 

 






Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Pre Ch
	Clear		Exit
	HDMI		Shift + Media
	Sleep		Sleep
	Call		Shift + Pre Ch
	Program		Shift + Sleep
	Repeat		Text
	Random		TV/R
	Status		AV
	Tone		List



Originalfernbedienung Ersatzfernbedienung

	Audio RDS		Shift + Dual
	Subtilte/PTY		Subt
	Angle/CT		3D
	Zoom/RT		Eject
	Surround		Format
	Surround		D. Menu
	Memo		Rec





Originalfernbedienung Ersatzfernbedienung




 



	On/Standby		Power
	Source Power	 + 	Shift + Power
	Channel+		Ch +
	Channel-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Source Power		Shift + Power
	Play		Play
	Stop		Stop
	Still/Pause		Pause
	>>		>>
	<<		<<
	Channel+		Ch +
	Channel-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

