 

 
 

 
 

 
 
 
 
 





 

 

 

 

 
 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------|---|--------|
|  | Power |  | Power |
|  | CD |  | 1 |
|  | Bluetooth/Pairing |  | 2 |
|  | FM |  | 3 |
|  | USB/Audio In |  | 4 |
|  | I<< |  | I<< |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | >>I |  | >>I |
|  | Stop |  | Stop |
|  | >< |  | Guide |
|  | Recall |  | Pre Ch |
|  | Album/Preset |  | Ch + |
|  | Album/Preset |  | Ch - |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|-------|
|  | Sound |  | Dual |
|  | Display |  | Info |
|  | Prog |  | Sleep |
|  | Sleep/Timer |  | AV |
|  | Clock/Scan |  | Media |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

