
 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV/Source		AV / Input / RDS
	0		0
	Exit/--		Shift + Guide / EPG / --
	Exit/--		Exit / Cancel / Clear
	P<P/SWAP		Fav / Marker / PC
	Info		Info / Angle
	PP		Back / Return

Originalfernbedienung Ersatzfernbedienung

	I/II		Audio / Lang I/II
	Ok/Select		OK
	Up		Up
	Left		Left
	Right		Right
	Down		Down
	Menu		Menu / Home
	TV/DTV		TV/Radio /
	CH+		CH+ / Page+
	Vol+		Vol+
	CH-		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	Red/↑		Shift + CH+ /
	Red/↑		Red / Netflix / Search
	Green/↓		Shift + CH- /
	Green/↓		Green / APP / Repeat



