 




**Originalfernbedienung Ersatzfernbedienung**

|   |         |   |               |
|---|---------|---|---------------|
|    | Power   |    | Power         |
|    | Display |    | VOD           |
|    | Mute    |    | MUTE          |
|    | Video   |    | MEDIA         |
|    | Scart   |    | Shift + MEDIA |
|    | 1       |    | 1             |
|    | 2       |    | 2             |
|    | 3       |    | 3             |
|    | 4       |    | 4             |
|    | 5       |    | 5             |
|   | 6       |   | 6             |
|  | 7       |  | 7             |
|  | 8       |  | 8             |
|  | 9       |  | 9             |
|  | 0       |  | 0             |
|  | Subpage |  | -/-- / EPG    |
|  | Pre-Ch  |  | P/C / FAV     |

**Originalfernbedienung Ersatzfernbedienung**

|   |        |   |               |
|---|--------|---|---------------|
|    | Source |    | SRC           |
|    | PIP    |    | WIDE          |
|    | TV     |    | TV/R          |
|    | PC     |    | Shift + TV/R  |
|    | Sound  |    | Audio         |
|    | Sleep  |    | Shift + Power |
|    | Swap   |    | BACK          |
|    | Zoom - |    | Shift + LEFT  |
|    | Zoom + |    | Shift + RIGHT |
|    | Vol +  |    | VOL +         |
|   | Vol -  |   | VOL -         |
|  | CH +   |  | CH +          |
|  | CH -   |  | CH -          |
|  | Menu   |  | MENU          |
|  | Exit   |  | EXIT          |
|  | Up     |  | UP            |
|  | Down   |  | DOWN          |



