 
 

 
 
 
 






 
 
 

 



 
 
 

 
 


 
 
 


 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	DTV/Radio		TV/R
	Backlight		Eject
	Info		Info
	Tv Audio		Dual
	ATV/DTV		Smart
	Sleep		Sleep
	Sound		Shift + Dual
	Picture		Shift + Format
	Freeze		Media
	Subtitle		Subt
	Wide		3D
	1		1
	2		2
	3		3
	4		4

Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Guide		Shift + Subt
	Return		Shift + Back
	[≡··]/List		List
	Prog+		Ch +
	Prog-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Back		Back
	Favorite		Pre Ch
	Input		AV



