

 



 


 






 







 
 
 
 
 



 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DVD		Shift + 2
	STB		Shift + 3
	HTS		TV/Radio /
	Red / Demo		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow / [ I ]		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Home		Menu / Home
	Guide		Guide / EPG / -/--
	Options		Setup / OPT /
	Options		Shift + Setup / OPT / Tools
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK

Originalfernbedienung Ersatzfernbedienung

	Back		Back / Return
	Back		Fav / Marker / PC
	Info		Info / Angle
	<<		<< / Tune-
	<<		I<< / Preset-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>		>> / Tune+
	>>		>>I / Preset+
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Vol +		Vol+
	Vol -		Vol-
	Mute		Mute / Dimmer
	P +		CH+ / Page+
	P -		CH- / Page-
	[<I>] / Format		Picture / Format





Originalfernbedienung Ersatzfernbedienung

NET TV	Net TV	SHIFT + TV 1	Shift + 1
TELETEXT	Teletext	GOTO TEXT	Text / Goto
DISC MENU	Disc Menu	TOP MENU D.MENU	D.Menu / Top
1	1	TV 1	1
2 ADV	2	DVD 2	2
3 DEF	3	CD - STB 3	3
4 GUP	4	VIDEO 4	4
5 JEL	5	TAPE 5	5
6 MND	6	TUNER 6	6
7 PURS	7	AUX - HDD 7	7
8 TUN	8	USB 8	8
9 WXYZ	9	BLUETOOTH 9	9
0	0	HDMI - SAT 0	0
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
Source	Source	RDS AV INPUT	AV / Input / RDS
Ambilight	Ambilight	LIST SMART	Smart / List

Originalfernbedienung Ersatzfernbedienung