








































 


 



















 

 
 

| Originalfernbedienung | Ersatzfernbedienung   | Originalfernbedienung | Ersatzfernbedienung   |
|-----------------------|---|-----------------------|---|
| Power                 |    | Power                 |   |
| OK                    |    | OK                    |   |
| Up                    |    | Up                    |   |
| Down                  |    | Down                  |   |
| Right                 |    | Right                 |   |
| Left                  |    | Left                  |   |
| Back                  |    | Back / Return         |   |
| Vol +                 |    | Vol+                  |   |
| Vol -                 |    | Vol-                  |   |
| Home / Smart          |    | Menu / Home           |   |
| 3D                    |  +  Shift + 3 |                       |   |
| Mute                  |    | Mute / Dimmer         |   |
| P +                   |    | CH+ / Page+           |   |
| P -                   |    | CH- / Page-           |   |
| Ratio                 |    | Picture / Format      |   |
| List                  |    | Smart / List          |   |
| Q.Menu                |    | D.Menu / Top          |   |
|                       |   | Subtitle              |  Subtitle / EQ                 |
|                       |   | Settings              |  Setup / OPT /                 |
|                       |   | >>                    |  >>I / Preset+                 |
|                       |   | >>                    |  >> / Tune+                    |
|                       |   | Play                  |  Play / Slow                   |
|                       |   | AD / PIP              |  Sound / Title                 |
|                       |   | <<                    |  I<< / Preset-                 |
|                       |   | <<                    |  << / Tune-                    |
|                       |   | Rec                   |  Rec / Rec Mode                |
|                       |   | Pause                 |  Pause / Step / Freeze         |
|                       |   | Text                  |  Text / Goto                  |
|                       |   | FAV                   |  Fav / Marker / PC           |
|                       |   | Exit                  |  Exit / Cancel / Clear       |
|                       |   | Input                 |  AV / Input / RDS            |
|                       |   | Blue                  |  Blue / Prime Video / Random |
|                       |   | Yellow                |  Yellow / YouTube / Repeat   |
|                       |   | Stop / Live TV        |  Stop / Hold                 |



Originalfernbedienung Ersatzfernbedienung

|            |   |                           |
|------------|---|---------------------------|
| AV Mode    |  +  | Shift + AV / Input / RDS  |
| Green      |    | Green / APP / Repeat      |
| Red        |    | Red / Netflix / Search    |
| 0          |    | 0                         |
| AD         |    | Audio / Lang I/II         |
| TV / PC    |  +  | Shift + Fav / Marker / PC |
| Search     |  +  | Shift + Red / Netflix /   |
| App        |  +  | Shift + Green / APP /     |
| TV / Radio |    | TV/Radio /                |
| Guide      |    | Guide / EPG / -/--        |
| Info       |    | Info / Angle              |
| Recent     |    | Sleep / Timer             |
| 9          |    | 9                         |
| 8          |    | 8                         |
| 7          |    | 7                         |
| Live Menu  |    | Display / Media           |
| 6          |    | 6                         |

Originalfernbedienung Ersatzfernbedienung

|               |   |                             |
|---------------|---|-----------------------------|
| 5             |    | 5                           |
| Q.View        |  +  | Shift + Display / Media     |
| 4             |    | 4                           |
| Live Zoom     |    | Zoom / Size                 |
| 3             |    | 3                           |
| 2             |    | 2                           |
| 1             |    | 1                           |
| T.Opt         |  +  | Shift + Setup / OPT / Tools |
| Energy Saving |    | Eject / Surround            |
| My APPS       |  +  | Shift + Smart / List        |
|               |   |                             |
|               |   |                             |
|               |   |                             |
|               |   |                             |
|               |   |                             |
|               |   |                             |
|               |   |                             |
|               |   |                             |
|               |   |                             |
|               |   |                             |
|               |   |                             |
|               |   |                             |

