




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|--------------|
|  | Power |  | Power |
|  | Display |  +  | Shift + Info |
|  | Mute |  | Mute |
|  | Video |  | Back |
|  | Scart |  | Smart |
|  | PC |  | Media |
|  | TV |  | TV/R |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|---------|
|  | Subpage |  | Eject |
|  | PRE-CH |  | Pre Ch |
|  | Source |  | AV |
|  | PIP |  | 3D |
|  | Sound |  | Dual |
|  | Sleep |  | Sleep |
|  | DTV Menu |  | D. Menu |
|  | Zoom- |  | << |
|  | Zoom+ |  | >> |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | Up |  | Up |
|  | Down |  | Down |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|--------------|
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | Teletext |  | Text |
|  | Mix |  | Options |
|  | Info |  | Info |
|  | Index |  | Guide |
|  | Size |  | Format |
|  | Hold |  | List |
|  | Subtitle |  | Subt |
|  | Reveal |  | Shift + Text |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

