
 
 

 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Menu/Disc		Menu
	Setup		Options
	Back		Back
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	>>		>>
	<<		<<
	I<		I<<
	Play		Play
	Pause		Pause
	>I		>>I

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	USB		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Subtitle		Subt
	Audio/Create MP3		Dual
	[<>]/Zoom		Format
	Repeat		Text
	Repeat A-B	 + 	Shift + Text

