


 
 
 
 
 
 

 
 
 
 
 

 
 

 
 
 

 



 
 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	TV		TV/R
	Radio		Shift + TV/R
	Rec-Menu / Clock		AV
	Rec-Menu / Clock		Shift + Rec
	Rec-Menu / Clock		Options
	Title		Smart
	Audio		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8


 
 
 

 



 



 
 



Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	EPG		Guide
	PIP		Format
	Assist		Media
	Text / Disc-M		Text
	Text / Disc-M		D. Menu
	Menu		Menu
	End		Exit
	Info		Info
	V+		Vol +
	V-		Vol -
	P+		Ch +
	P-		Ch -
	Up		Up
	Down		Down
	Right		Right





Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	Red / C-Set		Red
	Green / SV		Green
	Yellow / Zoom		Yellow
	Blue / Marker		Blue
	Play		Play
	<<		<<
	>>		>>
	Rec		Rec
	Pause		Pause
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

