




 
 



 
 
 
 
 
 


 
 
 



 

 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Info		Info
	Subtitle		Subt
	Mute		Mute
	I<<		I<<
	>>I		>>I
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	Record		Rec
	Stop		Stop
	Menu		Menu
	Exit		Exit
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	EPG		Guide
	Back		Back
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung

	0		0
	Media		Media
	Timer		AV
	Tv/Radio		TV/R
	Audio		Dual
	TTX		Text
	USB		Smart
	FAV		Pre Ch
	Res		Options
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

