 

 

 
 
 
 
 
 


 
 






 

 

 





 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Subtitle		Subt
	Info/Menu		Menu
	Disc Menu		D. Menu
	Home		Smart
	Back		Back
	Sleep		Sleep
	Function		AV
	Title/PopUp		Info
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Play		Play
	Pause/Step		Pause
	Stop		Stop
	<< Scan		<<

 

 
 
 
 
 




 
 
 

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 


 

Originalfernbedienung Ersatzfernbedienung

	Scan >>		>>
	I<< Skip		I<<
	Skip >>I		>>I
	Enter		Ok
	Up/Presets+		Up
	Down/Presets-		Down
	Left/Tuning-		Left
	Right/Tuning+		Right
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/Mono/Stereo		Blue
	1		1
	2		2
	3		3
	4		4
	5		5



 



 
 




Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	Rec		Rec
	Audio		Dual
	MIC/ECHO		Options
	Repeat		Text
	Clear		Exit
	*		Guide
	Optical/Tv Sound		TV/R
	Sound Effect		3D
	Speaker Level		Format
	Power Tv		Shift + Power
	AV/ Input Tv		Shift + AV
	PR/CH+ Tv		Ch +

Originalfernbedienung Ersatzfernbedienung

	PR/CH- Tv		Ch -
	Vol+ Tv		Shift + Vol +
	Vol- Tv		Shift + Vol -
	Mute Tv		Shift + Mute

