


 


 
 


 
 
 

 

 
 

 
 
 

 
 





 
 







 



 





 

 

 

 

 

 
 
 

 
 
 
 
 



 
 

 

 
 
 

 
 
 
 




Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Power		Power		MTS		Media
	Mute		Mute		Menu		Menu
	1		1		Source		AV
	2		2		Exit		Exit
	3		3		Display		Info
	4		4		Up		Up
	5		5		Down		Down
	6		6		Right		Right
	7		7		Left		Left
	8		8		Enter		Ok
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	ATV/DTV		D. Menu		Rec		Rec
	Recall		Back		Rec List		List
	P.Mode		Format		Tv/Radio		TV/R
	S.Mode		Dual		FAV List		Pre Ch
	Sleep		Sleep		CH+		Ch +

 





Originalfernbedienung Ersatzfernbedienung

	CH-		Ch -
	Play		Play
	Pause/Time Shift		Pause
	<</Guide		<<
	>>/Aspect		>>
	Stop/Index		Stop
	I<</Cancel		I<<
	>>I/Sub.PG		>>I
	Freeze		Eject
	Subtitle		Subt
	Size		3D
	Reveal		Options
	Hold		Smart
	Text		Text
	Red		Red
	Green		Green
	Yellow		Yellow

Originalfernbedienung Ersatzfernbedienung

	Cyan		Blue

