







 
 



 

 









 


 














 









 



 
 
 
 

 

 

 




Originalfernbedienung Ersatzfernbedienung






 







 






 
 
 
 

 
 
 
 
 

 

 
	Power		Power
	Source		AV
	Internet		Smart
	Sleep		Sleep
	Presets		Subt
	Multimedia		Media
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<
	>>		>>
	Lang		Dual
	[≡]		Pre Ch
	Red		Red
	Green		Green
	Yellow		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	Return		Shift + Back
	Menu		Menu
	Q.Menu		D. Menu
	Back		Back
	Exit		Exit





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Vol+		Vol +				
	Vol-		Vol -				
	Mute		Mute				
	P+		Ch +				
	p-		Ch -				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	OK		Ok				
	Wide		Format				
	Folder [* ]		Eject				
	i		Info				
	*/o		Options				
	*/o.		3D				
	Text		Text				
	[ ]≡		Guide				

