



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	Lang		Dual
	<<		<<
	>>		>>
	[≡]..		Subt
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3

Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv		TV/R
	Recall		Pre Ch
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu		Menu
	Back		Back
	Exit		Exit





**Originalfernbedienung**    **Ersatzfernbedienung**

	Q.Menu		D. Menu
	World		Media
	Music/Photo/Video		Smart
	*/o		3D
	*/Q		Eject
	Tv List		List
	Text		Text
	i		Info
	Size		Format
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -

**Originalfernbedienung**    **Ersatzfernbedienung**


