

 
 
 

 

 
 
 
 


 

 

 

 

 


 
 
 
 

 
 


 

 



 
 
 
 
 



 

 

 
 
 

 







 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Energy Saving		3D
	AV Mode		Shift + AV
	Input		AV
	TV / Rad		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Q.View		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Vol +		Vol +
	Vol -		Vol -
	Fav Mark		Shift + Pre Ch
	Ratio		Format
	Mute		Mute
	P + / Page +		Ch +
	P - / Page -		Ch -
	Menu		Menu
	Guide		Guide
	Q.Menu		D. Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Back		Back
	Info		Info





Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	T.Opt		Options
	Subtitle		Subt
	Stop		Stop
	Play		Play
	Pause		Pause
	<<		<<
	<<		I<<
	>>		>>
	>>		>>I
	Simplink		Smart

Originalfernbedienung Ersatzfernbedienung

