
 












 

 



 

 





 





 











 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Movie		Smart / List
	Music		Display / Media
	Photo		Picture / Format
	Setup		Setup / OPT /
	1		1
	A1		Shift + 1
	2		2
	A2		Shift + 2
	3		3
	A3		Shift + 3
	4		4
	A4		Shift + 4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	[]/16:9/4:3		Shift + Picture / Format
	0		0
	Zoom		Zoom / Size
	I<<		I<< / Preset-
	Up		Up
	>>I		>>I / Preset+
	Left		Left
	<</Jump		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>/Sort		>> / Tune+
	Right		Right
	OK		OK
	Vol+		Vol+
	Down		Down



