




 







 



 

 



 



 





 

 





 
 


 
 
 
 
 
 
 
 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	CH.List		List
	Recall		Pre Ch
	PIC.Mode		Shift + Format
	S.Mode		Shift + Dual
	Source		AV


Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Exit		Exit
	Menu		Menu
	Red/DVD Setup		Red
	Green/Repeat		Green
	Yellow/Languag		Yellow
	Blue/DVD Menu		Blue
	Title/Aspect		3D
	Zoom/Tv/Radio		TV/R


 




Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Subtitle		Subt
	Prog/Index	 + 	Shift + Sleep
	A-B/Reveal		Media
	Step/Audio		Dual
	Info/Display		Info
	Text		Text
	Size		Format
	Hold		Options
	Subpage		Guide
	Eject		Eject
	Play		Play
	Pause		Pause
	Stop		Stop
	I<<		I<<
	>>I		>>I
	<<		<<

Originalfernbedienung Ersatzfernbedienung

	>>		>>

