

 

 



 
 
 




 
 



 

 

 

 

 
 



 
 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | DVB/Analogue |  | Smart |
|  | AV |  | AV |
|  | Sleep |  | Sleep |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | S.Effect |  | Media |
|  | ▼/O/I/I/I |  +  | Shift + Dual |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|---------|
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | PR/Page+ |  | Ch + |
|  | PR/Page- |  | Ch - |
|  | Up/[≡▲] |  | Up |
|  | Down/[≡▼] |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK/Select |  | Ok |
|  | Guide |  | Guide |
|  | Subtitle |  | Subt |
|  | Language |  | Dual |
|  | Favourite |  | Pre Ch |
|  | Prev PR |  | Back |
|  | Menu |  | Menu |
|  | Aspect |  | 3D |
|  | Normal |  | Options |




Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------------|--|---------------|
| | [i]/Recall | | Info |
| | Cancel/Exit | | Exit |
| | Red | | Red |
| | Green | | Green |
| | Yellow | | Yellow |
| | Blue | | Blue |
| | [≡]/Text | | Text |
| | [≡?]/Reveal | | TV/R |
| | [≡x]/T.Cancel | | Eject |
| | [≡♦]/Size | | Format |
| | [≡o]/Subcode | | D. Menu |
| | [≡+]/Hold | | Shift + TV/R |
| | [≡i]/Index | | List |
| | Game | | Shift + Smart |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

