

 





 










 
 





Originalfernbedienung Ersatzfernbedienung

	Smart		Smart / List
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	CH List		Shift + Smart / List
	0		0
	Source		AV / Input / RDS
	Home		Shift + Home / Menu /
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix /
	Google Play		Display / Media
	Vol+		Vol+
	[i+]		Info / Angle
	P+		CH+ / Page+
	Vol-		Vol-
	Guide		Guide / EPG / -/-
	P-		CH- / Page-
	<</Reveal		<< / Tune-
	Play/Index		Play / Slow





Originalfernbedienung Ersatzfernbedienung

	>>/Mix		>> / Tune+
	Subtitle		Subtitle / EQ
	Pause/Timeshift		Pause / Step / Freeze
	Stop/Cancel		Stop / Hold
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	FAV/Size		Fav / Marker / PC
	AD/Subpage		Shift + AV / Input / RDS
	Nicam I/II/Hold		Shift + Stop /

Originalfernbedienung Ersatzfernbedienung