




Originalfernbedienung Ersatzfernbedienung

|   |             |   |                  |
|---|-------------|---|------------------|
|    | Power       |    | Power            |
|    | Mute        |    | Mute / Dimmer    |
|    | 1           |    | 1                |
|    | 2           |    | 2                |
|    | 3           |    | 3                |
|    | 4           |    | 4                |
|    | 5           |    | 5                |
|    | 6           |    | 6                |
|    | 7           |    | 7                |
|    | 8           |    | 8                |
|   | 9           |   | 9                |
|  | CH List     |  | Smart / List     |
|  | 0           |  | 0                |
|  | Return/Back |  | Back / Return    |
|  | Menu        |  | Menu / Home      |
|  | Up          |  | Up               |
|  | Source      |  | AV / Input / RDS |

Originalfernbedienung Ersatzfernbedienung

|   |            |   |                         |
|---|------------|---|-------------------------|
|    | Left       |    | Left                    |
|    | OK         |    | OK                      |
|    | Right      |    | Right                   |
|    | Home       |    | D.Menu / Top            |
|    | Down       |    | Down                    |
|    | Exit       |    | Exit / Cancel / Clear   |
|    | Netflix    |    | Shift + Red / Netflix / |
|    | Vol+       |    | Vol+                    |
|    | Info       |    | Info / Angle            |
|    | PR+        |    | CH+ / Page+             |
|   | Vol-       |   | Vol-                    |
|  | EPG        |  | Guide / EPG / -/-       |
|  | PR-        |  | CH- / Page-             |
|  | Rec        |  | Rec / Rec Mode          |
|  | Nicam I/II |  | Audio / Lang I/II       |
|  | Text       |  | Text / Goto             |
|  | AD/Subpage |  | Sound / Title           |





Originalfernbedienung Ersatzfernbedienung

|                 |             |                          |                             |
|-----------------|-------------|--------------------------|-----------------------------|
| SIZE<br>FAV     | FAV/Size    | PC<br>FAV<br>MARKER      | Fav / Marker / PC           |
| SIZE<br>FAV     | FAV/Size    | SIZE<br>ZOOM             | Zoom / Size                 |
| HOLD<br>QUICK   | Quick/Hold  | MEDIA<br>DISPLAY         | Display / Media             |
| [Red Button]    | Red         | NETFLIX<br>SEARCH        | Red / Netflix / Search      |
| [Green Button]  | Green       | APP<br>REPEAT            | Green / APP / Repeat        |
| [Yellow Button] | Yellow      | YouTube<br>REPEAT A-B    | Yellow / YouTube / Repeat   |
| [Blue Button]   | Blue        | Prime<br>Video<br>RANDOM | Blue / Prime Video / Random |
| INDEX<br>▶/     | Play        | SLOW<br>▶                | Play / Slow                 |
| INDEX<br>▶/     | Pause/Index | STEP - FREEZE<br>        | Pause / Step / Freeze       |
| REVEAL<br>◀◀    | <</Reveal   | TUNE-<br>◀◀              | << / Tune-                  |
| MIX<br>▶▶       | >>/Mix      | TUNE+<br>▶▶              | >> / Tune+                  |
| CANCEL<br>■     | Stop/Cancel | HOLD<br>■                | Stop / Hold                 |
|                 |             |                          |                             |
|                 |             |                          |                             |
|                 |             |                          |                             |
|                 |             |                          |                             |
|                 |             |                          |                             |
|                 |             |                          |                             |
|                 |             |                          |                             |
|                 |             |                          |                             |
|                 |             |                          |                             |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

