 



 







 
 
 






 




 
 
 
 
 

 

 









 











 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-------|
|  | Continue |  | Media |
|  | Shuffle |  | TV/R |
|  | Program |  | Sleep |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 10 |  | 0 |
|  | >10 |  | Guide |
|  | Clear |  | Exit |
|  | Disc 1 |  | Red |
|  | Disc 2 |  | Green |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|--------|
|  | Disc 3 |  | Yellow |
|  | Disc 4 |  | Blue |
|  | Disc 5 |  | Smart |
|  | Disc Skip |  | Back |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | Stop |  | Stop |
|  | I<< AMS |  | I<< |
|  | AMS >>I |  | >>I |
|  | << |  | << |
|  | >> |  | >> |
|  | M.Scan |  | Pre Ch |
|  | Fader |  | Mute |
| | | | |
| | | | |
| | | | |
| | | | |

