 


 








Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-------------------|
|  | Open / Close |  | Eject / Surround |
|  | Display |  | Display / Media |
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | 10+ |  | Guide / EPG / -/- |
|  | GOTO |  +  | Shift + Text / |
|  | Title / TTX |  | Text / Goto |
|  | Title / TTX |  | Sound / Title |

























 



 
Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------------------|
|  | Subtitle |  | Subtitle / EQ |
|  | Angle |  | Info / Angle |
|  | Language |  | Audio / Lang I/II |
|  | Menu |  | Menu / Home |
|  | Up / CH + |  | CH+ / Page+ |
|  | Up / CH + |  | Up |
|  | Setup |  | Setup / OPT / |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | << |  | << / Tune- |
|  | Down / CH - |  | Down |
|  | Down / CH - |  | CH- / Page- |
|  | >> |  | >> / Preset+ |
|  | >> |  | >> / Tune+ |
|  | Play / Pause |  | Pause / Step / Freeze |
|  | Play / Pause |  | Play / Slow |






 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-----------------------------|
|  | I<< |  | I<< / Preset- |
|  | Vol - |  | Vol- |
|  | Vol + |  | Vol+ |
|  | Stop |  | Stop / Hold |
|  | Switch |  | Smart / List |
|  | Zoom |  | Zoom / Size |
|  | Mute |  | Mute / Dimmer |
|  | TV / Radio |  | TV/Radio / |
|  | RAN |  | Blue / Prime Video / Random |
|  | PBC |  | Fav / Marker / PC |
|  | Return |  | Back / Return |
|  | L / R |  | Sleep / Timer |
|  | N / P |  | AV / Input / RDS |
|  | Slow |  | Shift + Play / |
|  | Repeat |  | Green / APP / Repeat |
|  | Prog / EPG |  | Shift + Guide / EPG / -/- |
|  | Prog / EPG |  | Shift + TV/Radio / Program |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|---------------------------|
|  | Video |  | Shift + 4 |
|  | CD Ripping |  | Picture / Format |
|  | A - B |  | Yellow / YouTube / Repeat |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

