



Originalfernbedienung Ersatzfernbedienung

TEST	Test	GOTO TEXT	Text / Goto
1	1	TV 1	1
1	1 FM/AM	SHIFT + TV 1	Shift + 1
2	2	DVD 2	2
2	2 FM/AM	SHIFT + DVD 2	Shift + 2
3	3	CD - STB 3	3
3	3 FM/AM	SHIFT + CD - STB 3	Shift + 3
EFFECT	Effect	FORMAT PICTURE	Picture / Format
4	4	VIDEO 4	4
4	4 FM/AM	SHIFT + VIDEO 4	Shift + 4
5	5	TAPE 5	5
5	5 FM/AM	SHIFT + TAPE 5	Shift + 5
6	6	TUNER 6	6
6	6 FM/AM	SHIFT + TUNER 6	Shift + 6
7/P	7/P	SHIFT + AUX - HDD 7	Shift + 7
7/P	7 FM/AM	AUX - HDD 7	7
8	8	USB 8	8

Originalfernbedienung Ersatzfernbedienung

8	8 FM/AM	SHIFT + USB 8	Shift + 8
9	9	BLUETOOTH 9	9
9	9 FM/AM	SHIFT + BLUETOOTH 9	Shift + 9
*LEVEL	Level- SURR L	Down	Down
*LEVEL	Level - SURR R	SHIFT + Down	Shift + Down
*LEVEL	Level- Center	SHIFT + CH PAGE -	Shift + CH- /
*LEVEL	Level- SUBWFR	Left	Left
*LEVEL	Level- Front L	VOL -	Vol-
*LEVEL	Level- Front R	CH PAGE -	CH- / Page-
*LEVEL+	Level+ SURR L	Up	Up
*LEVEL+	Level+ SURR R	SHIFT + Up	Shift + Up
*LEVEL+	Level+ Center	SHIFT + CH PAGE +	Shift + CH+ /
*LEVEL+	Level+ SUBWFR	Right	Right
*LEVEL+	Level+ Front L	+ VOL	Vol+
*LEVEL+	Level+ Front R	+ CH PAGE	CH+ / Page+
10	10/Return	SHIFT + GUIDE EPG	Shift + Guide / EPG / -/-
10	10 FM/AM	GUIDE EPG	Guide / EPG / -/-





Originalfernbedienung Ersatzfernbedienung

	0		0
	+10/+100		Fav / Marker / PC
	+10 FM/AM		Shift + 0
	Play/TA/News/Info		Shift + Play /
	Play FM/AM		Play / Slow
	I<</PTY-		Shift + I<< / Preset-
	I<<FM/AM		I<< / Preset-
	Pause/PTY Search		Shift + Pause / Step / Freeze
	Pause FM/AM		Pause / Step / Freeze
	>>I/PTY+		Shift + >>I / Preset+
	>>I FM/AM		>>I / Preset+
	Stop/Display		Shift + Stop /
	Stop FM/AM		Stop / Hold
	FM/AM		Shift + TV/Radio / Program
	FM Mode		TV/Radio /

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Up		Up
	Left		Left
	Right		Right
	Menu		Menu / Home
	Down		Down
	Enter		OK
	Play/TA/News/Info	+	Shift + Play /
	Play VCR		Play / Slow
	I<</PTY-	+	Shift + I<< / Preset-
	I<< VCR		I<< / Preset-
	Pause/PTY Search	+	Shift + Pause / Step /
	Pause VCR		Pause / Step / Freeze
	>>I/PTY+	+	Shift + >>I / Preset+
	>>I VCR		>>I / Preset+
	Rec Pause VCR		Rec / Rec Mode
	Stop/Display		Stop / Hold
	Stop VCR	+	Shift + Stop / Hold
			Hold





Originalfernbedienung Ersatzfernbedienung

	Audio Standby		Audio / Lang I/II
	1		1
	2		2
	3		3
	TV Standby		Power
	4		4
	5		5
	6		6
	VCR Standby		Shift + Power
	7/P		7
	DVD Standby		Shift + 2
	Play/TA/News/Info		Play / Slow
	Sleep		Sleep / Timer
	I<</PTY-		I<< / Preset-
	Pause/PTY Search		Pause / Step / Freeze
	>>I/PTY+		>>I / Preset+
	Stop/Display		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	FM/AM		Shift + TV/Radio / Program
	VCR		Shift + 4
	Analog/Digital		Smart / List
	FM/Mode		AV / Input / RDS
	Surround		Eject / Surround
	DSP		Text / Goto
	Surround DSP		Sound / Title
	Dimmer		Shift + Mute / Dimmer
	Tv/Video		TV/Radio /
	Muting		Mute / Dimmer
	VCR CH+		Shift + CH+ /
	Tv CH+		CH+ / Page+
	Tv Vol+		Shift + Vol+
	Vol+		Vol+
	VCR CH-		Shift + CH- /
	Tv CH-		CH- / Page-
	Tv Vol-		Shift + Vol-



