



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info
	Setup		Options
	Menu		Menu
	Music		Media
	Copy		Pre Ch
	Zoom		Eject
	Tv System		TV/R
	Source		AV
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Home		Smart
	Return/X		Back
	Up		Up
	Down		Down
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Goto		Guide
	Time Shift		3D
	Rec		Rec
	Play		Play
	Stop		Stop





Originalfernbedienung Ersatzfernbedienung

PAUSE	Pause	PAUSE	Pause
PREV	I<<	PREV	I<<
SLOW	Slow/l>	PROG SLEEP	Sleep
NEXT	>>I	NEXT	>>I
FF	>>	FF	>>
FR	<<	FR	<<
TIMER	Timer	SHIFT + AV	Shift + AV
A-B	A-B	PICTURE FORMAT	Format
SUBTITLE	Subtitle	AD SUBT	Subt
REPEAT	Repeat	REPEAT TEXT	Text
RECLIST	Reclist	DISC NAV LIST	List
AUDIO	Audio	SOUND DUAL	Dual
Red	Red	A	Red
EPG	Green/EPG	B	Green
TTX	Yellow/TTX	C	Yellow
Blue	Blue	D	Blue

Originalfernbedienung Ersatzfernbedienung

