


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Step		Pause / Step / Freeze
	0		0
	3D		Picture / Format
	S.Fit		Text / Goto
	Zoom		Zoom / Size
	Digest		Sleep / Timer



 




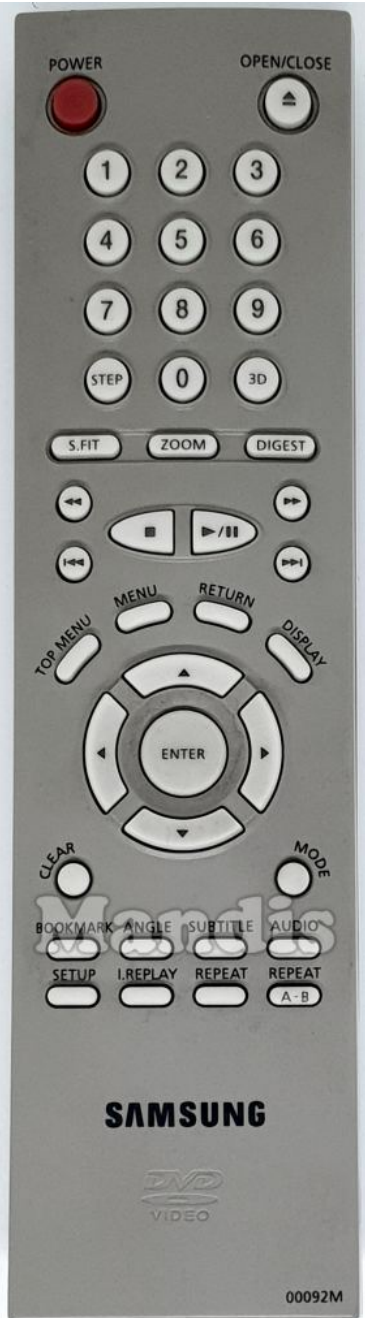






 
 
Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	Stop		Stop / Hold
	Play / Pause		Play / Slow
	>>		>> / Tune+
	l<<		l<< / Preset-
	>>l		>>l / Preset+
	Menu		Menu / Home
	Return		Back / Return
	Top Menu		D.Menu / Top
	Up		Up
	Display		Display / Media
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Clear		Exit / Cancel / Clear
	Mode		TV/Radio /





Originalfernbedienung Ersatzfernbedienung

	Bookmark		Fav / Marker / PC
	Angle		Info / Angle
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Setup		Setup / OPT /
	I.Replay		AV / Input / RDS
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

