












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject / Surround
	Tv/Radio		TV/Radio /
	Red/Goto		Red / Netflix / Search
	Red/Goto	 + 	Shift + Text /
	Green/Angle		Info / Angle
	Green/Angle		Green / APP / Repeat
	Yellow/Repeat	 + 	Shift + Green / APP /
	Yellow/Repeat		Yellow / YouTube / Repeat
	Blue/A-B	 + 	Shift + Blue / Prime
	Blue/A-B		Blue / Prime Video / Random
	FAV		Fav / Marker / PC
	Text		Text / Goto
	Freeze/Hold	 + 	Shift + Stop /
	Freeze/Hold	 + 	Shift + Pause / Step /
	EPG		Guide / EPG / -/--
	D.Menu		D.Menu / Top



Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subtitle / EQ
	Zoom/Size		Zoom / Size
	Aspect	 + 	Shift + Picture / Format
	Subpage	 + 	Shift + Subtitle / EQ
	Media	 + 	Shift + Display / Media
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	D.Setup		Setup / OPT /
	Stop		Stop / Hold
	I<<		I<< / Preset-
	I>>		I>> / Preset+
	I>>		Smart / List
	Menu		Menu / Home
	Lang/Audio		Audio / Lang I/II


 

 










 

 











Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Sleep		Sleep / Timer
	Down		Down
	Title/Exit	 + 	Shift + Sound / Title
	Title/Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	1		1
	2		2
	3		3

Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0	 + 	Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	Source		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title

